

KODAK
RP X-OMAT
Processor
Model M7B-E



HEALTH SCIENCES

PLEASE NOTE

The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

CAUTION




This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

Table of Contents

Description	Page
Wiring Diagram for the Model M7B-E	3
Circuit Diagram for the Model M7B-E	4
Circuit Diagram for the 100 Circuit Board, Model M7B-E	6
100 Circuit Board - Functions of the LEDs	9
Wiring Diagram for the Electrical Box, Model M7B-E	10


Wiring Diagram for the Model M7B-E

COLOR CODE
K-BLACK
N-BROWN
R-RED
O-ORANGE
Y-YELLOW
G-GREEN
B-BLUE
V-VIOLET
A-GRAY
W-WHITE

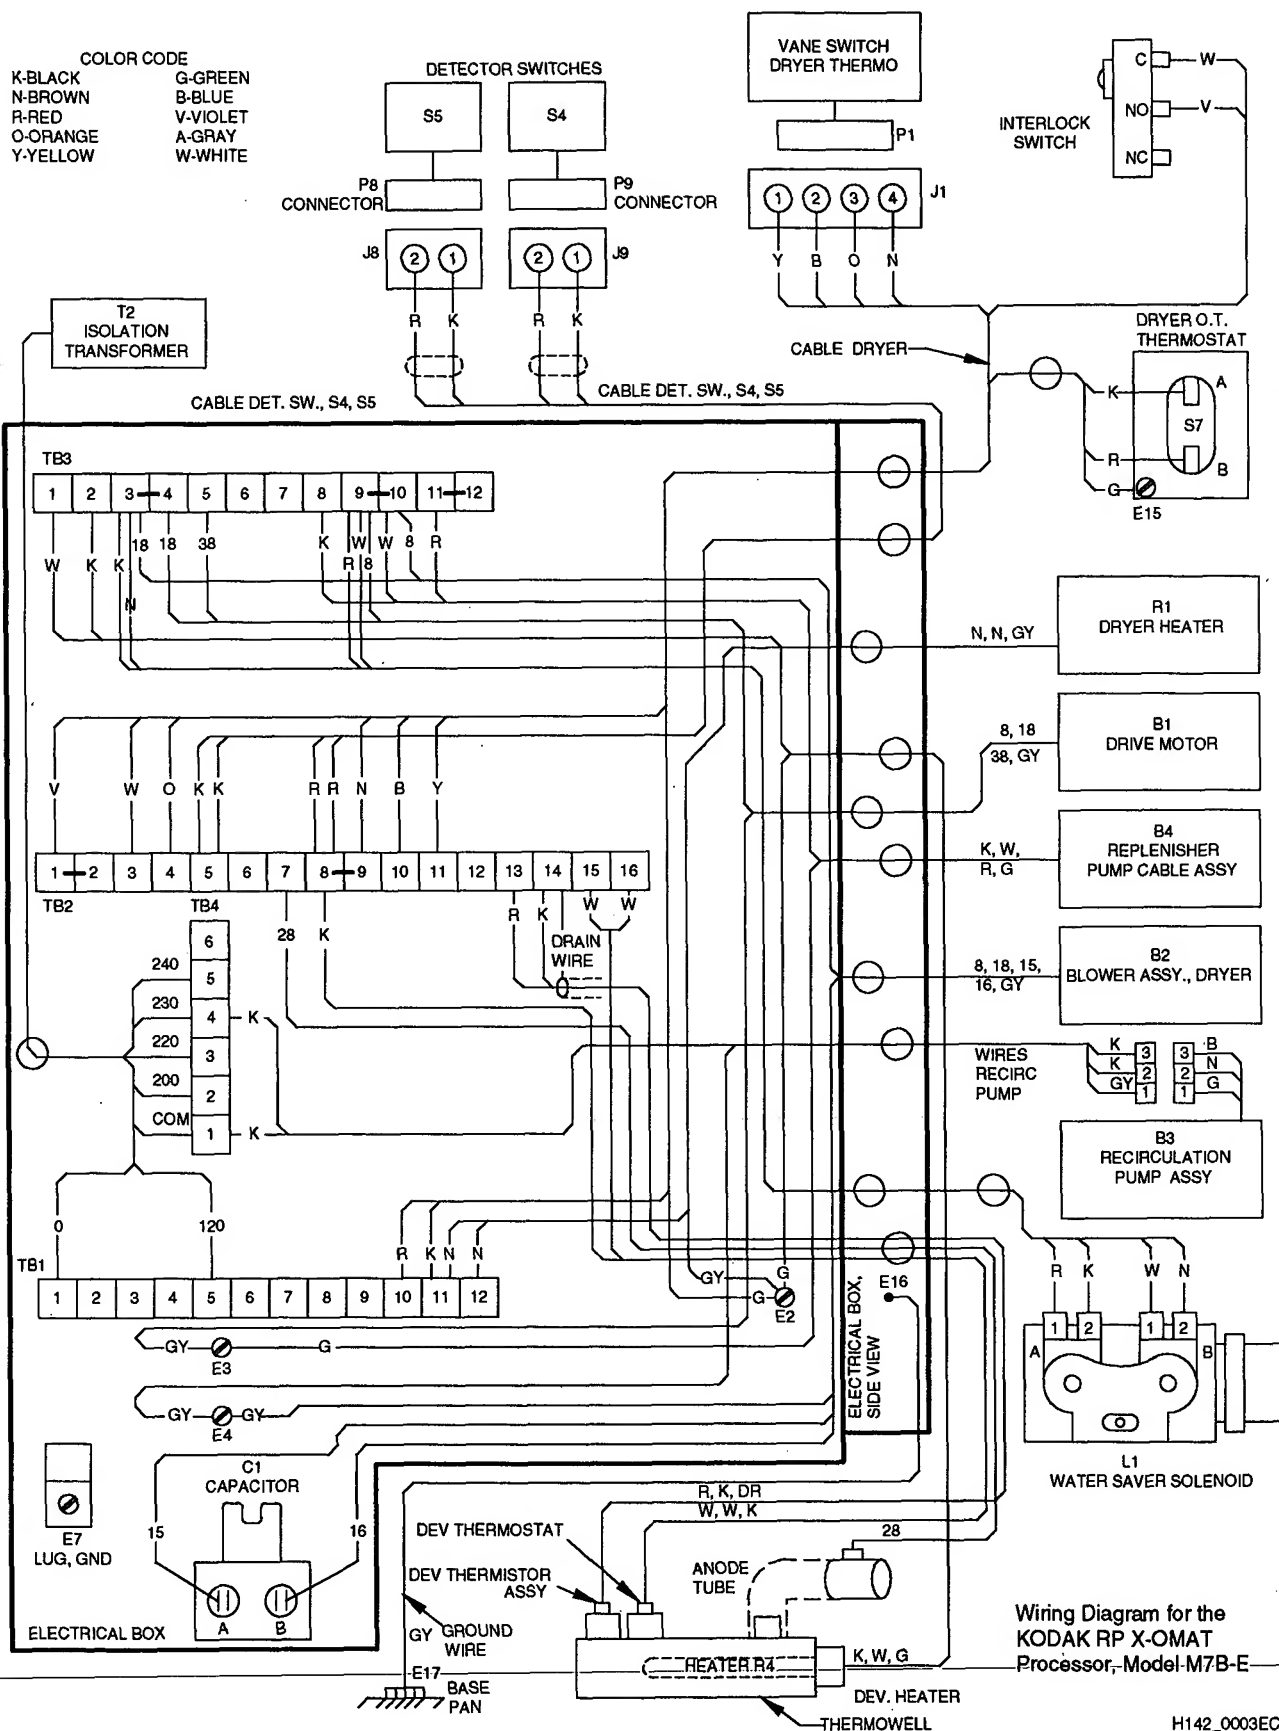

H142_0003EC_


Circuit Diagram for the Model M7B-E

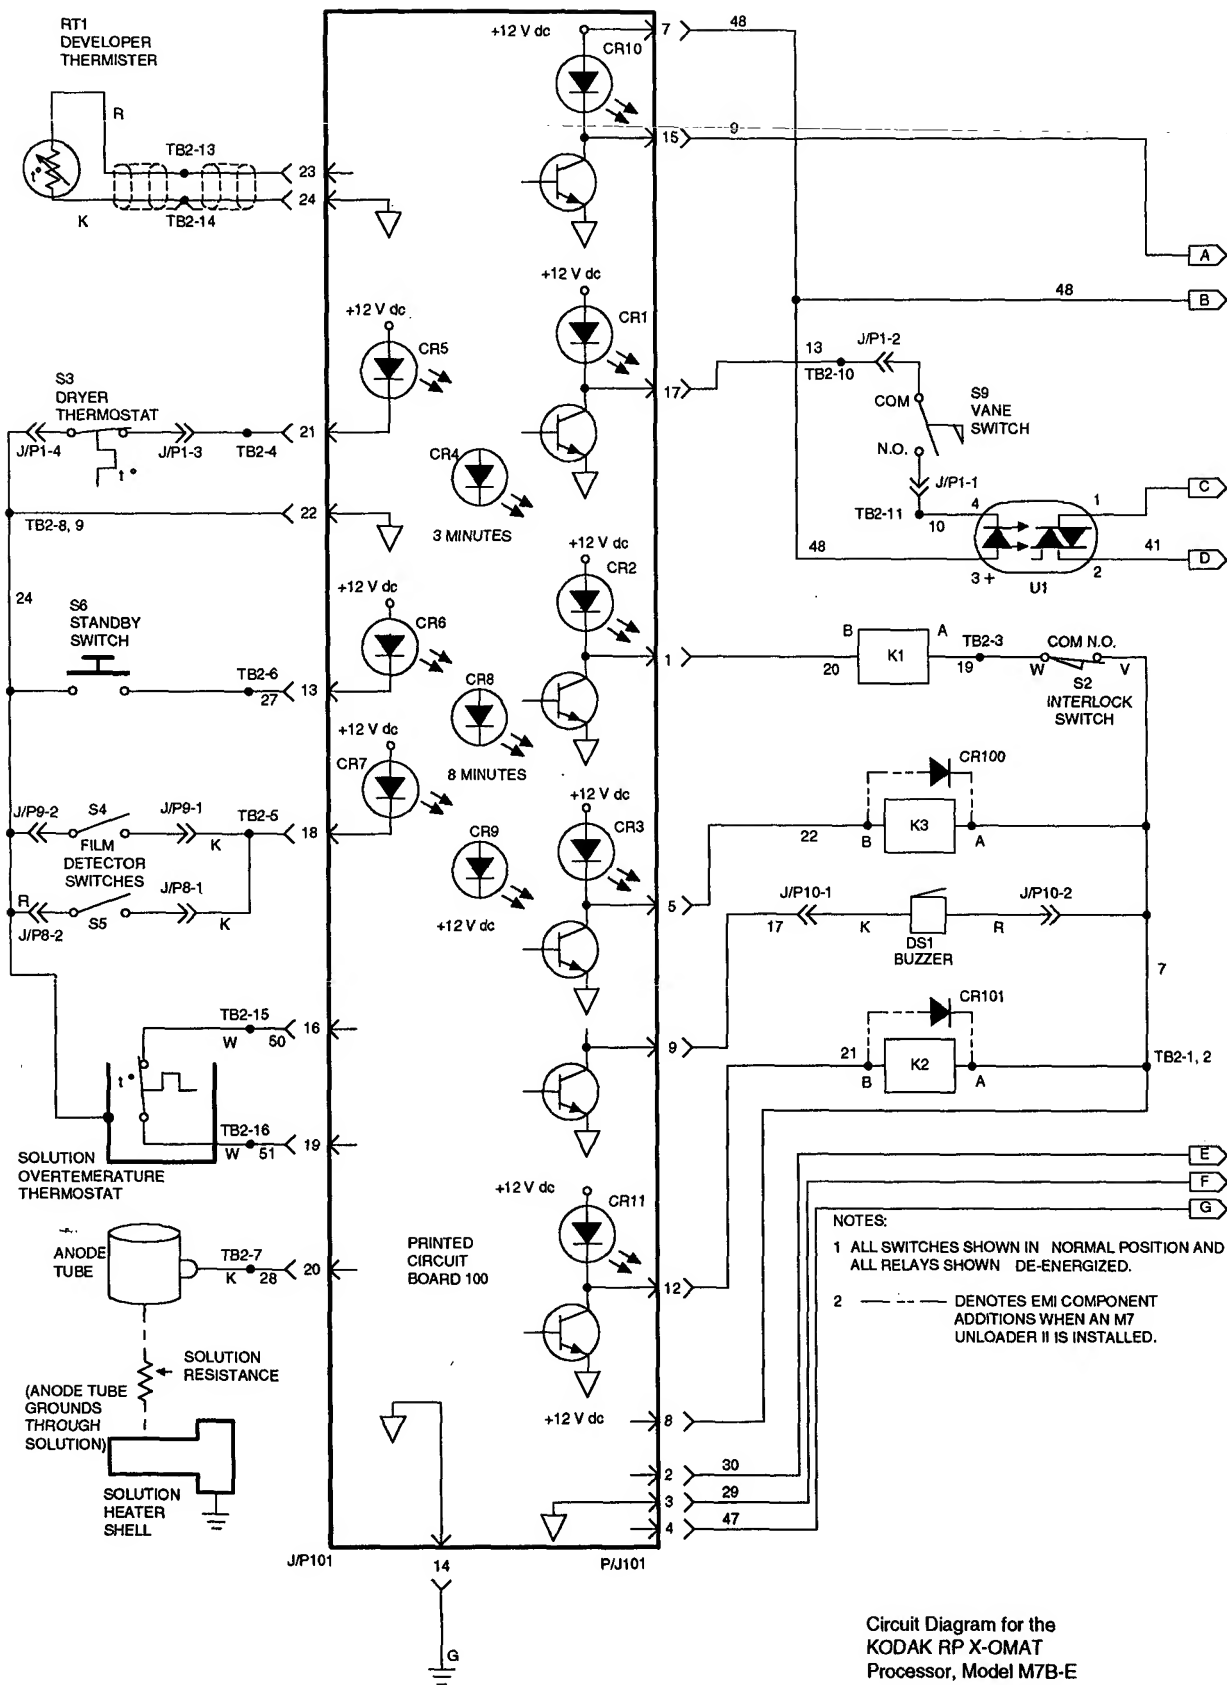



Circuit Diagram for the
KODAK RP X-OMAT
Processor, Model M7B-E

H142_0001EC_

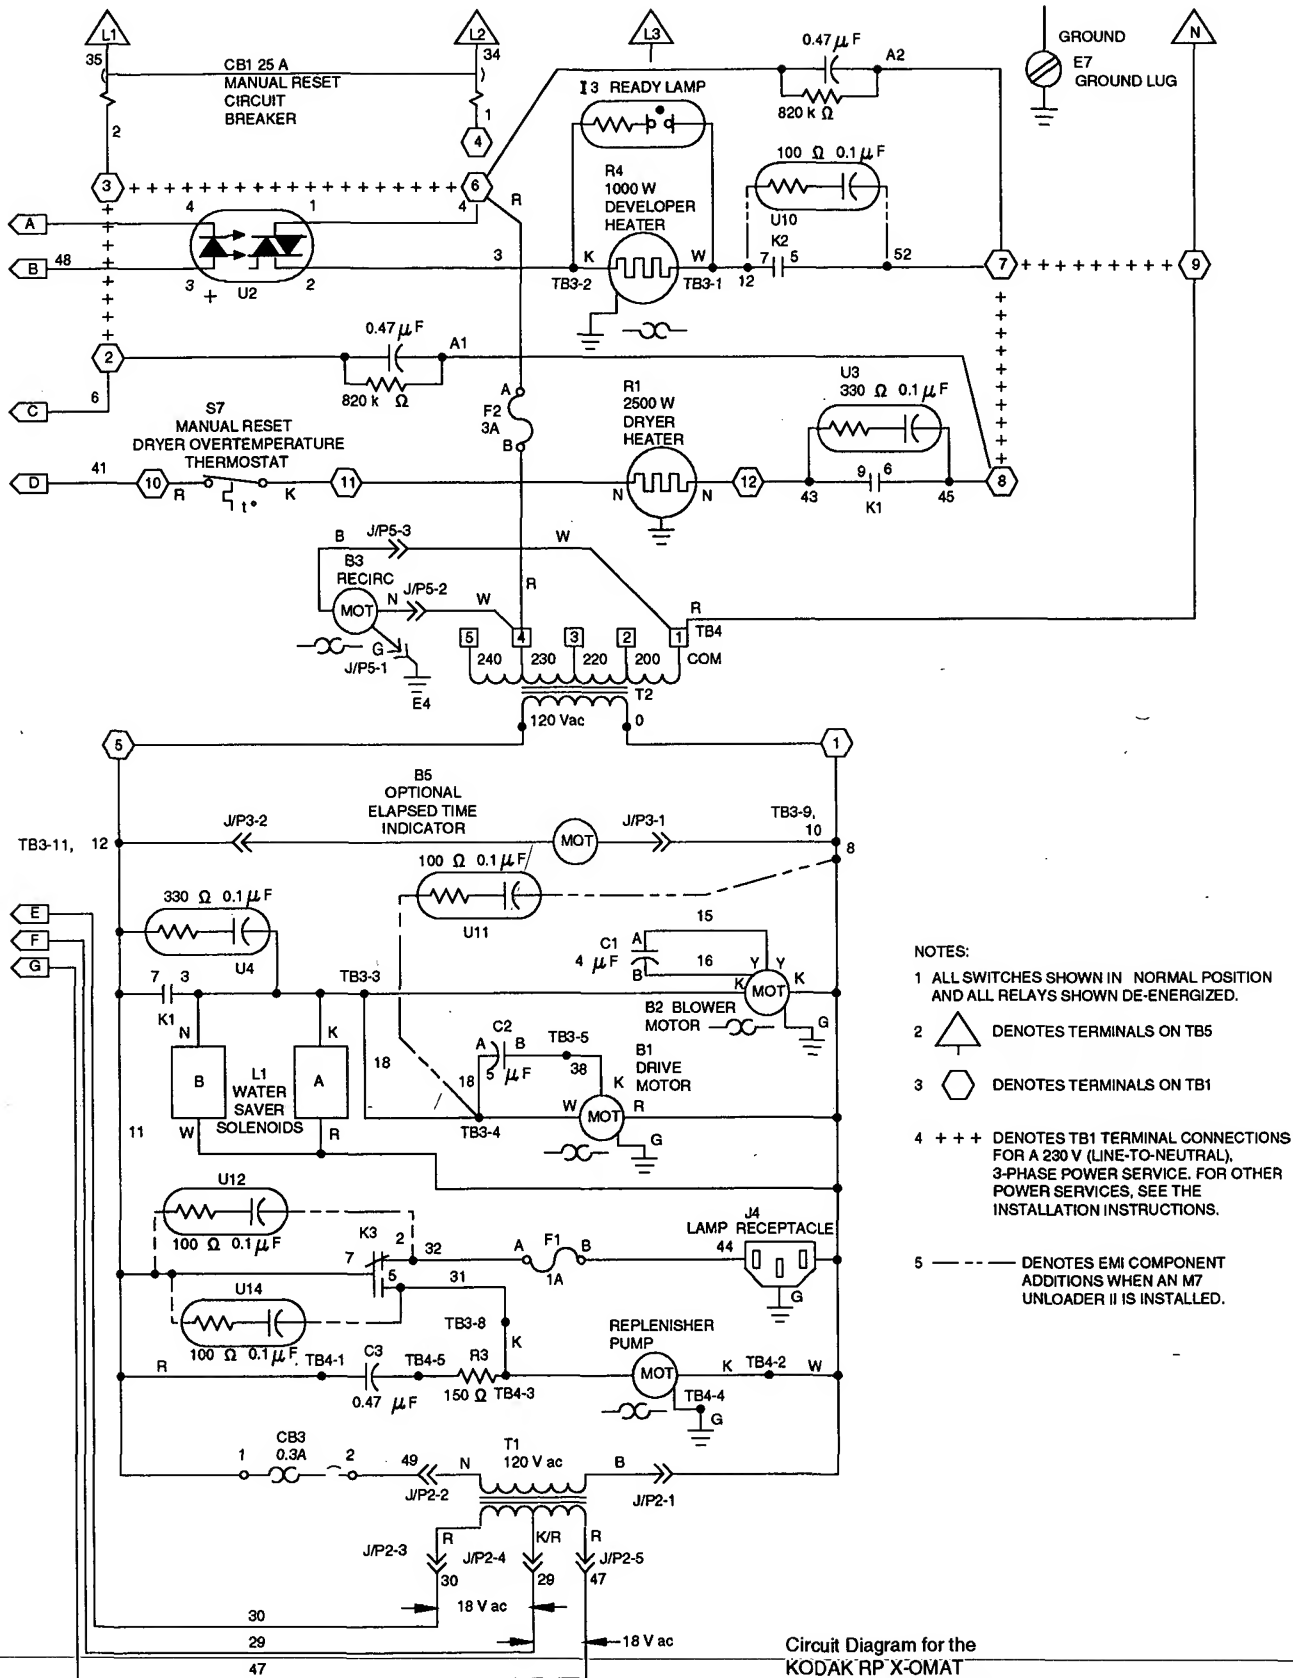Circuit Diagram for the Model M7B-E, Continued



NOTES:

- 1 ALL SWITCHES SHOWN IN NORMAL POSITION AND ALL RELAYS SHOWN DE-ENERGIZED.
- 2  DENOTES TERMINALS ON TB5
- 3  DENOTES TERMINALS ON TB1
- 4 + + + DENOTES TB1 TERMINAL CONNECTIONS FOR A 230 V (LINE-TO-NEUTRAL), 3-PHASE POWER SERVICE. FOR OTHER POWER SERVICES, SEE THE INSTALLATION INSTRUCTIONS.
- 5 - - - DENOTES EMI COMPONENT ADDITIONS WHEN AN M7 UNLOADER II IS INSTALLED.

Circuit Diagram for the
KODAK RP X-OMAT
Processor, Model M7B-E

H142_0002EC_




100 Circuit Board - Functions of the LEDs

CAUTION

Possible damage from electrostatic discharge.


LED	On Indicates:	The following occurs:
CR1	Solid State Relay U1 is energized.	The Dryer Heater is on.
CR2	Relay K1 is energized.	The Blower and the Drive Motor are operating and the Water Solenoid is on.
CR3	Relay K3 is energized.	The Replenishment Pump is operating and the Accessory Outlet is off.
CR4	The 3-Minute Timer is on.	Film Clear Time - Film is moving through the Detector Rollers.
CR5	Switch S3 is closed.	The Dryer is not at operating temperature.
CR6	Switch S6 is closed.	The Standby Button is actuated.
CR7	Switches S4 and/or S5 are closed	Film is in the Entrance Rollers.
CR8	The 8-Minute Timer is on when CR8 blinks on 1 second, off 1 second.	The Processor is in Standby.
CR9	12 V dc is available on the 100 Circuit Board	CR9 is always on during normal operation.
CR10	Solid State Relay U2 is energized.	The Developer Heater is on.
CR11	Relay K2 is energized.	CR11 is always on during normal operation.

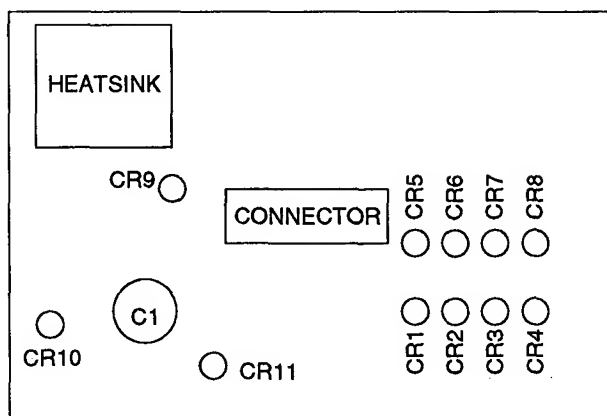

Approximate Locations of LEDs
on the 100 Circuit Board

H142_0005AC

Wiring Diagram for the Electrical Box, Model M7B-E

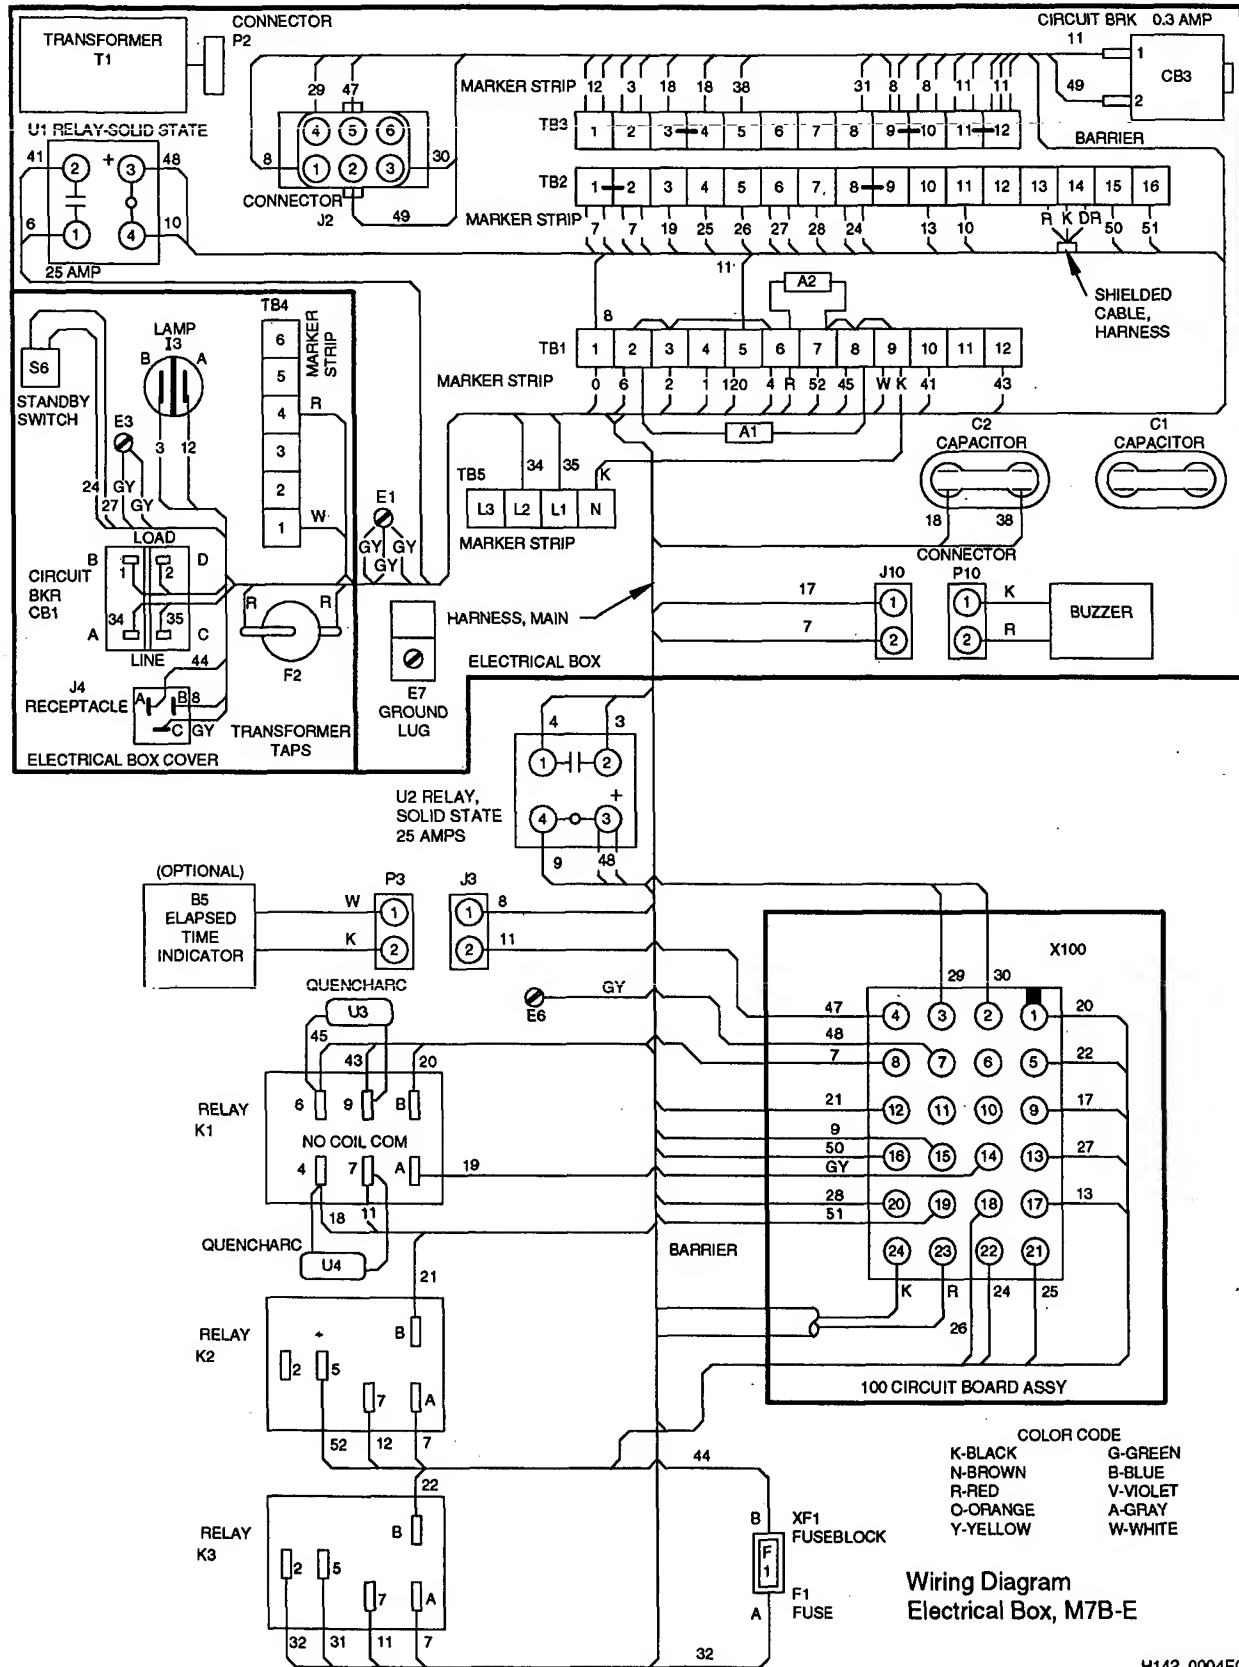

H142_0004EC_

BLANK PAGE

Health Sciences
EASTMAN KODAK COMPANY
Rochester, NY 14650

KODAK and X-Omat are trademarks.

Printed on recycled paper containing 10% post-consumer waste fiber, using soybean-based inks. The post-consumer fiber is made up of Eastman Kodak Company office paper waste.

The new vision of Kodak

